

## 4. General Use

An Emergency Alert can ALWAYS be deployed.  
Even if the pendant is off.

FUNCTION	BUTTON SEQUENCE
Send EMERGENCY alert	Press and hold for > 3 seconds until both LEDs blink green and orange.
Cancel EMERGENCY alert	2 clicks within 1 second, then hold until pendant beeps once and vibrates once.

## 5. Battery

**WARNING**  
**DO NOT REMOVE BATTERIES IN A POTENTIALLY EXPLOSIVE ATMOSPHERE.**

USE ONLY THE FOLLOWING BATTERY TYPES:  
Duracell® MN1500 or Energizer® E91 'AA' Alkaline batteries.

Normal typical battery life when used with recommended battery is 5-7 days, 10 hr/day.

1. Replace all batteries at the same time
2. Remove fully discharged batteries immediately.

## 6. Included Parts



Man Down Pendant



Gateway Interface Box



Windshield Gateway

RST410\_REV02\_09/12



www.beamcommunications.com  
info@beamcommunications.com  
TEL: +61 3 8588 4500  
FAX: +61 3 9560 9055



## QUICK START GUIDE

### Man Down Pendant




Suitable for connection with Beam's Tracking Products and Applications

Beam Communications Pty Ltd

## 1. LED Indications During button press

### Send EMERGENCY alert

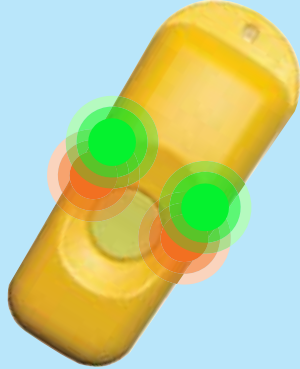



Press and hold (for > 3 seconds) until both LEDs blink green and orange.

\*LEDs will continue to blink until EMERGENCY alert is acknowledged or cancelled.





## 1A. LED Indications

### LEFT LED

-  Solid Green - Motion sensing OFF
-  Solid Orange - Motion sensing ON



### RIGHT LED

-  Solid Green - Pendant in operating range.
-  Solid Orange - Pendant out of operating range.
-  Blinking Green - Pendant in operating range, battery low.
-  Blinking Orange - Pendant out of operating range, battery low.

## 2. Button Functions

OFF

ON

ON WITH MOTION SENSING

Double click within 1s

Double click within 1s

Double click within 1s

Triple click within 1s

Triple click within 1s

Triple click within 1s

## 3. Sound/Vibrate Indications

### Pendant powering on/off



### Cancel EMERGENCY alert



### Successful acknowledgements



2 sound sequences will sound.

### Unsuccessful acknowledgement



2 sound sequences will sound.

### MOTION SENSE EMERGENCY alert caused by lack of motion



1-6 beeps every 5 seconds if there is no motion after 30 seconds.

### Out of range alert




1 beep will sound every 10 seconds.

### Battery Low



1 beep will sound every 60 seconds.

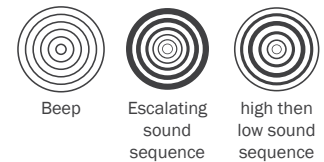

Beep

Escalating sound sequence

high then low sound sequence



4 Vibrations



1 Vibration